

ARMADILLO® SWEEPER SW/10XV



PowerBoss, Inc. A Member Of The Hako Group



The Model and Serial Numbers of your machine are shown on the name machine. This information is needed when contacting Technical Supportion of your convenience, use the space below to record the Model and Semachine and the date it was placed into service.	rt or ordering parts.
MODEL NUMBER:	<u></u> 35
SERIAL NUMBER:	
DATE PLACED INTO SERVICE:	

Contact: techsupport@powerboss.com

All information contained in this manual is current at the time of printing. However, due to constant updates and improvements, we reserve the right to make changes at any time without notice.

© Copyright 2008, Minuteman PowerBoss, Inc.

All rights reserved. This manual may not be copied or reproduced in any form, without the written permission of Minuteman PowerBoss, Inc.

PowerBoss, Inc. Copyright 2008

PB # 4100034 | Rev. 01A06 | Armadillo* SW/10XV

POWER BOSS The Power of Clean

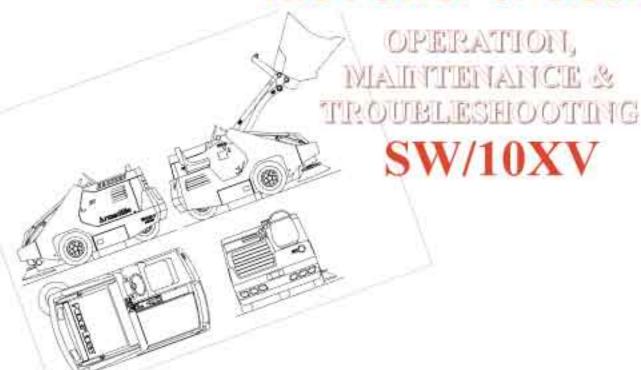


TABLE OF CONTENTS

Features	7
Limited Warranty	8
SAFETY	
Safety Symbols	9
Safety Decals10	
Basic PowerBoss® Safety1	2-14
OPERATION	
Basic Operating Controls1	5-16
Sweeping Controls	. 17
Debris Hopper Dump Controls	
Operating Procedures	
Pre-Operation Check	19
Pre-Operation Check	. 19
Slowing and Stopping	. 20
Operating on Grades	
Sweeping	
Emptying the Hopper	. 20
Using the Rotary Trash Relocator (RTR™)	21
Transporting the Machine	



TABLE OF CONTENTS (Continued)

MAINTENANCE	
Introduction	2.3
Planned Maintenance Chart	
Engine	24
Air Intake System	2.4
Electrical System	24
Coolant System	24
Hydraulics System	
Sweep Components	
Hopper	
Steering	
Parking Brake	26
Parking Brake	27
Miscellaneous	
Impeller	
Service Instructions	
Engine	28
Air Intake	MINDMINE
Filter Removal	29
Filter Removal Filter Cleaning	29
Filter Inspection	29
Filter Installation	
Electrical System	
Battery Cleaning	30
Battery Replacement	30
Circuit Breakers	30
Fuses	30
Fuel System	
WARNINGS	31
Tier "Compliancy	31
Coolant System	
Blowing Out Radiator Fins	32
Reverse Flow Flushing	33
Lubrication	
Changing Engine Oil	33
Lubrication Points	
Hydraulics System	
Filling the Fluid Reservoir	35
Changing the Hydraulic Fluid	35
Changing the Hydraulic Fluid Filter	36
Adjusting the Directional Control	
Data and Caralana	26 27



TABLE OF CONTENTS (Continued)

MAINTENANCE (CONTINUED)

Sweep Components	
Broom Door Flap Inspection	38
Broom Door Flap Replacement	
and Adjustment	38
Main Broom Adjustment	38
Main Broom Height Adjustment	
Main Broom Taper Adjustment	40
Main Broom Replacement	
Side Broom Angle Adjustment	
Side Broom Height (Wear) Adjustment	
Side Broom Replacement	43
Hopper	
Hopper Removal	44
Hopper Replacement	44
Filter Removal	
Filter Cleaning	45
Filter Replacement	45
Floor Clearance and Dump Adjustments	
Adjusting Maximum Hopper Dump Angle.	47
Vacuum Gasket Mount Adjustment	
Flap Replacement	48
Frame Seal Replacement	
Front Frame Seal	48
Side Frame Seal	48
Parking Brake	49
lires	
Changing Solid Tires	
Changing Pneumatic Tires	50
Miscellaneous Adjustments	
Anti-Static Chain	51
Latches and Hinges	51
Cables	51



TABLE OF CONTENTS (Continued)

TROUBLESHOOTING	
Basic Machine Operating Problems	
Engine will not start or runs roughly after start	52
Engine overheats	53
PowerBoss" moves slowly or does not move	53
PowerBoss creeps in neutral	
Sweeping Problems	
Brushes do not turn or turn very slowly	54
Little or no vacuum in brush compartment	55
Loss of dust control	55
Sweeper unit leaving debris	. 55-56
Hopper does not raise or lower	
Hopper does not rotate or rotates slowly	
Hydraulic System Problems	
Hopper lift cylinder failure	57
Hydraulic motor failure	
Hydraulic gear pump failure	
Hydraulic variable displacement pump failure	
Hydraulic system noisy	
Your page	61
Notes	62
Electrical Schematic Kubota V2203	63
Electrical Schematic GM 1.6L	64
Electrical Schematic GM 1.6L	65
Hydraulic Schematic 10XV	66
Wassanty Matrix	67



SW/10XV

FEATURES

- 1. Dust Control Filter: 180 Sq. Ft. total
- 2. Timed Electric Filter Shakers
- Shock-mounted Hydraulic Impeller
- 4. Power Steering with Tilt Steering Wheel
- Adjustable Seat
- 6. Exhaust Air Expelled Outside Engine
- 7. Industrial Liquid-Cooled Engine
- 8. 4-Core Radiator
- Tri-Phase Air Cleaner
- 10. Built-In Dust PreFiltering
- 11. One-Piece Unitized Steel Frame
- 12. Clogged Filter Indicator
- 13. Hydraulics Protection Package
- 14. Dual Performance Sweep Mode
- 15. Quick-Change Floating 56" Main Broom
- PowerClimb™ All-Terrain Access (Two 23" OD Pneumatic Front Tires & One 21" OD Pneumatic Rear Tire)
- Oversized Hopper with RTR™
- 18. Retractable Quick-Change Side Broom
- 19. Multi-Level Hopper Dumping Up To 64.0"
- 20. Fire-in-hopper Indicator

Warranty



Revision D Effective June 1, 2007 PowerBoss Made Simple Industrial Limited Warranty

PowerBoss warrants to the original purchaser/user that the product is free from defects in workmanship and materials under normal use. PowerBoss will, at its option, repair or replace without charge, parts that fail under normal use and service when operated and maintained in accordance with the applicable operation and instruction manuals. All warranty claims must be submitted through and approved by factory authorized repair stations.

This warranty does not apply to normal wear, or to items whose life is dependent on their use and care. Parts not manufactured by PowerBoss are covered by and subject to the warranties and/or guarantees of their manufacturers. Please contact PowerBoss for procedures in warranty claims against these manufacturers.

Special warning to purchaser — Use of replacement parts not manufactured by PowerBoss or its designated licensees, will void all warranties expressed or implied. A potential health hazard exits without original equipment replacement.

All warranted items become the sole property of PowerBoss or its original manufacturer, whichever the case may be.

PowerBoss disclaims any implied warranty, including the warranty of merchantability and the warranty of fitness for a particular purpose. PowerBoss assumes no responsibility for any special, incidental or consequential damages.

This limited warranty is applicable only in the U.S.A. and Canada, and is extended only to the original user/ purchaser of this product. Customers outside the U.S.A. and Canada should contact their local distributor for export warranty policies. PowerBoss is not responsible for costs or repairs performed by persons other than those specifically authorized by PowerBoss. This warranty does not apply to damage from transportation, alterations by unauthorized persons, misuse or abuse of the equipment, use of non-compatible chemicals, or damage to property, or loss of income due to malfunctions of the product. If a difficulty develops with this machine, you should contact the dealer from whom it was purchased.

This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Some states do not allow the exclusion or limitation of special, incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.



SAFETY SYMBOLS

Five symbols are used throughout this manual to emphasize various levels of safety information. These symbols and the meaning of each are listed below.



DANGER: To warn of immediate hazards which will result in severe personal injury or death



WARNING: To warn of hazards or unsafe practices which could result in severe personal injury or death.



CATUION: To warn of hazards or unsafe practices which could result in minor personal injury.



ATTENTION!: To warn of practices which could result in extensive equipment damage.

NOTE

NOTE: To direct your attention to important equipment information or special instructions for preventing damage to equipment

Symbols at the top of the list are the strongest warnings. However, all symbols represent important information which should be observed to protect you and others from harm and injury, and to prevent damage to the equipment.



SAFETY DECALS

Decals directly attached to various parts of the sweeper are highly visible safety reminders which should be read and observed. Make sure the decals are replaced if they become illegible or damaged. The decal below is located in the drive compartment. Other safety decals on you machine appear on the next page.

A CAUTION

For Your Safety And Safety Of Others:

- DO NOT Operate Machine:
 Unless Operation Manual Is Read And Understood.
 Unless Authorized And Trained.
 In Areas With Flammable Or Explosive Conditions.
 Without Adequate Ventilation.
- 2. Do Not Use Flammable Cleaning Materials.
- 3. Inspect Vehicle For Fuel Leakage.
- 4. Drive Slowly On Inclines And Slippery Surfaces.
- Do Not Power Dump Hopper Unless Vehicle Is On A Level Surface.
- Before Leaving Vehicle: Lock Parking Brake, Stop Engine, And Remove Key.

Part Number 301854

PowerBoss, Inc. Copyright 2008

Heige 10



SAFETY DECALS (Continued)

Located at the Impeller:



Part Number 301729

Located on the High Dump Hopper:



Part Number 301732

Located on the Shroud of the Radiator:



Part Number 301733



BASIC PowerBoss® SAFETY

PowerBoss® sweepers should never be operated unless: 1. The operator is trained and authorized to operate the equipment and, 2. The equipment is free of malfunctions. Malfunctioning equipment should be removed from service.



 Keep cigarettes, matches and all other flame sources away from the sweeper. Gasoline, LP gas and diesel fuel are highly flammable. Lead acid batteries are equally dangerous due to the highly explosive hydrogen gas they emit.



- Before starting the engine, make sure that:
 - "You are securely seated in the operator's seat.
 - * The parking brake is locked.
 - * The directional control pedal is in neutral.
 - * The throttle is in idle.
 - * Hydraulic controls are in the OFF position.
- 2. During operation:
 - * Keep your hands and body clear of moving parts, expecially when the hopper or lift arms are partially or fully raised.
 - * Make sure others in the area stay clear of the equipment and moving parts.
 - Never attempt to dump debris from a dock or mezzanine. Dump from ground level only.
- 3. When leaving the sweeper unattended:
 - * Place the controls in the OFF position.
 - * Set the parking brake.
 - * Shut off the engine.



BASIC PowerBoss SAFETY (Continued)

- 4. During cleaning and maintenance:
 - Always stop the engine and set the parking brake before servicing.
 - Never use detergents or cleansers that are flammable or combustible.
 - Never inflate a pneumatic tire without using a safety cage.
 - * Do not attempt any impeller adjustment unless you have shut off the engine. Never place your hands near the intake hoses or inlet when the engine is running.
 - * Always engage the safety arm before servicing the hopper. Do not rely on the hydraulic cylinder to keep the hopper raised.
 - Never test for hydraulic hose leaks using your hand or any other part of your body. High pressure leaks can be very dangerous and should only be checked using a piece or paper.
- 5. When servicing or repairing the fuel system:
 - Work in a properly ventilated area, do not smoke or allow an open flame near the fuel system.
 - * Never bypass safety components unless you are testing them.
 - Never bypass the fuel filter lock, except when testing them (and always reconnect them after testing).
 - Wear gloves to disconnect the tank coupling.
- Do not operate an LPG powered sweeper when any component in the fuel system is malfunctioning or leaking.
- Replace any defective safety components before operating the sweeper.



 Do not drive with the hopper in the raised position except the few feet necessary to position the hopper over the dumpster or receptacle. Driving with the hopper raised reduces visibility and creates conditions for striking overhead objects, throwing the machine off-balance and other hazards.



BASIC PowerBoss® SAFETY (Continued)

- 2. Travel slowly on grades.
- Place a block or chock behind the wheels when parking on inclines.
- 4. Use special care when traveling on wet surfaces.
- Observe all proper procedures for operation and maintenance of the sweeper, as outlined in this manual.
- Remain alert at all times to people and equipment in and around your area of operation.



- Do not operate the #2 RTR lever before the #1 light illuminates.
- 2. Never push or tow a machine faster than 6 mph.



BASIC OPERATING CONTROLS

IGNITION SWITCH

The machine has a four position key switch used to turn the machine's electric power on and off.

STARTER

To start gasoline powered machines, turn the key clockwise to the **Start** position When the engine starts, release the key. To stop the engine, turn the key to **OFF**.

To start diesel engines, turn the ignition key counterclockwise to the Glow Plug warming position for 20 seconds. After 20 seconds turn ignition key clockwise to the Start position. When engine starts release

key.

NOTE

If the engine does not start after 10 seconds, release the key, wait 1 minute and repeat the procedure.

HORN

The horn is activated by pressing the horn button located on the right side of the operator.

FUEL LEVEL GAUGE The fuel gauge indicates the amount of fuel remaining in the tank.

VOLTMETER AMP GAUGE The Voltmeter used on gas & LP units or Amp Gauge used on diesel units indicates the charging current which is being sent to the battery by the alternator. It also indicates a drop in voltage when the alternator is not charging.

HOUR METER

The hour meter records the number of hours the machine has been operated, providing a helpful guide for performing routine maintenance tasks.

ENGINE OIL PRESSURE The engine oil pressure gauge ranges from 0 psi to 60 psi. A reading below 7 psi indicates problems which may result in damage to the engine.

ENGINE COOLANT TEMPERATURE GAUGE The engine coolant temperature gauge registers the temperature of the engine coolant. Temperatures above 220°F indicate an overheating engine.



BASIC OPERATING CONTROLS (Continued)

THROTTLE

The throttle adjusts the engine speed from idle to the operating speed.

- The throttle should be in the IDLE position when starting the engine and immediately before shutdown.
- Full throttle position should be used during operation to ensure proper broom speed and dust control.

DIRECTIONAL CONTROL PEDAL

The directional control pedal controls the speed and direction of the machine. It is also used for slowing the machine or stopping.

- To propel the machine forward, apply pressure to the front of the pedal, increasing pressure to increase speed.
- To propel the machine backward, apply pressure to the rear of the pedal.
- To slow or stop the machine, move the foot pedal into neutral
- For emergency stops, move the foot pedal past neutral and into the opposite position.

ACAUTION

Use for emergency stops only! Constant use of this braking method may result in damage to the drive components.

The sweeper is equipped with a speed limiter. A stop is mounted under the directional control pedal and can be raised to reduce the maximum speed.

PARKING BRAKE

The hydraulic drum brakes on the two front wheels are operated by pressing on the brake pedal. The parking brake is cable activated. To engage the parking brake pull upward on the hand brake lever located on the left side of the front wall of the operator's compartment.



SWEEPING CONTROLS

BROOM CONTROL LEVER

The broom control lever activates the brooms. ("Side Broom OFF" position activates the main broom only.)

NOTE

The main broom and side broom may be lowered independently.

NOTE

The "OFF" position is achieved by placing the broom control lever in the center of the slot. Both broom motors (main & side) are de-activated by taking this action.

MAIN BROOM HANDLE

The main broom handle to the immediate left of the driver raises and lowers the main broom. For normal sweeping, position the handle at the **LOWER** position on the handle slot.

 For extremely uneven floor, position the handle at the FLOAT position on the handle slot.

NOTE

Extensive use of the FLOAT position reduces broom life.

 When not sweeping, position and lock the handle to the RAISE position on the handle slot.

SIDE BROOM HANDLE

The side broom handle to the immediate left of the driver raises and lowers the side broom.

- When not sweeping, the side broom should remain in the RAISE position.
- To lower the side broom, position the handle to the LOWER position in the handle slot.



DEBRIS HOPPER DUMP CONTROLS

HOPPER FILTER SHAKER BUTTON

This button is used to activate the filter shakers prior to dumping or as needed during sweeping operation. It is located to the left hand side of the instrument panel.

To shake the filter

- Bring the machine to a complete stop.
- 2. Place the broom control lever in the OFF position.
- 3. Press and hold the filter shaker button for 20 to 30 seconds.
- Place the broom control lever in the ON position and resume sweeping.



Do not leave the hopper in the RAISE position for an extended period of time.

HIGH DUMP MODELS

The two far left levers on the front of the control panel are used to raise the hopper to any height up to 60" (1.52 m) and dump it.

- To raise the hopper, pull back Lever 1 to the RAISE position and hold until the hopper raises to the proper height for the dumpster or container.
- To empty debris, pull back Lever 2 to the DUMP position to rotate the hopper forward and empty the debris.
- To rotate the hopper back, push Lever 2 forward to the RETURN position until the hopper rotates and stops.
- To lower the hopper, push Lever 1 forward to the LOWER position until the hopper stops.

ROTARY TRASH RELOCATOR (RTRTM)

Rotary Trash Relocator (RTR™) is a standard feature on highdump models. Its purpose is to increase the holding capacity of the debris hopper to make dumping the hopper necessary less frequently.



OPERATING PROCEDURES

PRE-OPERATION CHECKS

Prior to starting the engine, check the following:

- 1. Engine oil level
- 2. Engine coolant level
- Fuel level
- 4. Hydraulic fluid level
- Brakes, steering and directional controls
- The floor beneath the machine for signs of fluid leaks

Fluid levels should be correct. Brakes, steering and directional controls should be functioning properly. Hoses, lines and tanks should be free of damage and leaks.

STARTING



Before starting the engine, sit in the operator's seat and make sure the parking brake is locked.

- Make sure the directional control pedal is in the neutral position.
- 2. Make sure the throttle is in the idle position.
- Gasoline-powered: Turn the ignition key to the ON position, push the button located just below the key. When the engine starts, release the button. If the engine is cold, pull out the choke knob and repeat the above procedure. When the engine is running smoothly, push the choke knob in.



If the engine fails to start, do not continue cranking for more than ten seconds. Allow the starter motor to cool between attempts.

- 4. Move the machine forward or backward as follows:
- Forward: Apply pressure to the front of the directional control pedal, increasing pressure to increase speed.
- Reverse: Apply pressure to the rear of the pedal, increasing pressure to increase speed.



SLOWING AND STOPPING

 Allow the directional control pedal to move into neutral. The machine will slow and coast to a stop.

OPERATING ON GRADES

- Always travel slowly.
- Exercise extreme caution when traveling across or turning on grades.

SWEEPING

Lower the Brooms

- When sweeping extremely uneven floors, position the main broom handle at FLOAT on the handle slot
- Lower the side broom by positioning the side broom handle at LOWER in the handle slot.
- Lower the main broom by positioning the main broom handle to LOWER on the handle slot

Activate the broom motors.

- Activate both main and side broom motors by push ing the broom and brush control lever to the ON position.
- Activate the main broom motor by pulling the broom and brush control lever to the SIDE BROOM OFF position.

NOTE

Broom control lever must be in the center OFF position.

Drive the machine over the area to be swept.

EMPTYING THE HOPPER High Dump Models

- Drive the machine to the dumping area.
- Use the directional control pedal to position the machine so that the space between the machine and the container or dumpster is adequate to raise the hopper.
- Reduce the engine speed.
- Pull back Lever 1 to the RAISE position and hold until the bottom of the hopper is high enough to clear the top of the container.

PowerBoss, Inc. Copyright 2008



AWARNING

Never place your hands or other body parts near the lift arms when the hopper is operating.

Use the directional control pedal to slowly and carefully move the machine forward until the hopper is properly positioned to dump the debris into the container.

AWARNING

It is unsafe to travel an extended distance with the hopper raised. Travel only the distance necessary to position the hopper.

- Shake the filters for 20-30 seconds. Pull back Lever 2 to the DUMP position to rotate the hopper forward and empty the debris.
- After the hopper empties, push Lever 2 forward to the RETURN position until the hopper rotates and stops.
- Slowly back the machine away fro the dumpster approximately 5 feet.
- Push Lever 1 forward to the LOWER position until the hopper stops.

USING THE ROTARY TRASH RELOCATOR (RTR^{IM})

- Use the directional control pedal to stop the machine on a level surface.
- Move the throttle to the IDLE position.

NOTE

As you complete Steps three and four, observe the two red lights labeled 1 and 2 in the upper left corner of the control pane.

- Light 1 illuminates when the hopper reaches the minimum height required to use the RTRTM feature.
- Light 2 illuminates when the hopper reaches the rotation stop point.
- Pull back Lever 1 to the RAISE position and hold until Light 1 illuminates, then release.

AWARNING

Make sure no one is in the area under or around the hopper.



 Pull back Lever 2 to the DUMP position and hold until Light 2 illuminates, then release.

NOTE

This rotates the hopper, causing the debris to move from the rear entrance to the front wall of the hopper. Rotating beyond this point will cause the debris to be dumped from the hopper.

- Push Lever 2 forward to the RETURN position until the hopper rotates back and stops.
- Push Lever 1 forward to the LOWER position until the hopper returns to the normal operating position.
- Move the throttle to the RUN position and resume sweeping.

TRANSPORTING THE MACHINE Loading

- Position the machine on the transport vehicle or trailer and apply the parking brake.
- Tie the machine down using the tie down holes in the frame behind both front wheels and in the rear center of the frame.

NOTE

Attach the tie downs to the frame only.

Pushing

 Push the machine from the front or rear using the bumpers only.

ATTENTION!

Do not tow or push the machine a distance of more than .5 miles (.80 kilometers) or faster than one mile per hour (1.61 km). Exceeding these restrictions may cause damage to the hydraulic system. If towing will exceed the above restrictions, the rear wheel must be raised or supported by a dolly.



PLANNED MAINTENANCE CHART INTRODUCTION

Regular maintenance on your sweeper results in better cleaning, faster cleaning and a prolonged service life for the equipment and components. This section contains the following information to help you give your sweeper the maintenance attention it requires:

- A Planned Maintenance Chart
- Service Instructions for Required Maintenance Tasks

Because it is extremely important to your safety, you will see the following WARNING repeated throughout this section:



Never attempt to perform any service on the equipment or components until the engine is OFF, the parking brake is LOCKED, and the wheels are CHOCKED.



PLANNED MAINTENANCE CHART

REQU	REQUENCY (IN HOURS)			URS)	SERVICE	
AILY	50	100	200	500	(BY MAINTENANCE AREA)	
		x			ENGINE Pressure wash engine	
					For additional maintenance requirements, refer to the engine manual.	
					AIR INTAKE SYSTEM	
X					Empty rubber dust cup of air filter element.	
	X				Clean air filter. NOTE: Clean more often in dusty conditions.	
			х		Replace air filter.	
					ELECTRICAL SYSTEM	
		x			Check electrolyte level in battery cells and fill as needed.	
			х		Clean battery top.	
					COOLANT SYSTEM	
X					Check coolant level and fill as needed.	
	x				Inspect radiator fins and clean as needed.	
		x			Blow out radiator fins.	

PowerBoss, Inc. Copyright 2008



PLANNED MAINTENANCE CHART (Continued)

REQU	JENC	Y (II	OH V	URS)	SERVICE
AILY	50	100	200	500	(BY MAINTENANCE AREA)
					HYDRAULIC SYSTEM
X					Check hydraulic reservoir gauge and fill as needed.
				x	Replace breather cap filter element.
				x	Replace hydraulic fluid and filter
X					Check functioning of directional control pedal and adjust as needed.
				x	Clean hydraulic fluid strainer in reservoir.
	X				Inspect hydraulic oil cooler fins and clean as needed.
		X			Blow out hydraulic oil cooler fins with compressed air
					SWEEPING COMPONENTS
X					Inspect brooms for wear and remove strings and debris from bristles and drive assembly.
	х				Inspect broom skirts for wear and adjust or replace as needed.
	X				Rotate main broom end-to-end.
	X				Perform main broom adjustment test and adjust as needed.
X					Inspect the side broom for wear and adjust as needed.
					Replace main and side brooms as needed. Main Broom—Bristles are 1" in length. Side Broom—Bristles are 3" in length.

PowerBoss, Inc. Copyright 2008



PLANNED MAINTENANCE CHART (Continued)

X Check hopper clearance from floor and adjust needed. Inspect the hopper flaps for wear or damage replace as needed. X Inspect hopper side and frame seals for wear damage. Adjust or replace as needed. X Lubricate the pillow blocks supporting the dimechanism. STEERING X Lubricate steering cylinder rod ends. X Lubricate steering fork assembly.	QUENCY (IN HOURS)	SERVICE	
Check hopper filters and clean or replace as needed. Check hopper clearance from floor and adjust needed. Inspect the hopper flaps for wear or damage replace as needed. Inspect hopper side and frame seals for wear damage. Adjust or replace as needed. X Lubricate the pillow blocks supporting the dimechanism. STEERING X Lubricate steering cylinder rod ends. X Lubricate steering fork assembly.	Y 50 100 200 500	(BY MAINTENANCE AREA)	
X Check hopper clearance from floor and adjust needed. Inspect the hopper flaps for wear or damage replace as needed. X Inspect hopper side and frame seals for wear damage. Adjust or replace as needed. X Lubricate the pillow blocks supporting the dimechanism. STEERING X Lubricate steering cylinder rod ends. X Lubricate steering fork assembly.		HOPPER	
Inspect the hopper flaps for wear or damage replace as needed. X Inspect hopper side and frame seals for wear damage. Adjust or replace as needed. X Lubricate the pillow blocks supporting the dimechanism. STEERING X Lubricate steering cylinder rod ends. X Lubricate steering fork assembly.		Check hopper filters and clean or replace as needed.	
Inspect hopper side and frame seals for wear damage. Adjust or replace as needed. X Lubricate the pillow blocks supporting the dimechanism. STEERING X Lubricate steering cylinder rod ends. X Lubricate steering fork assembly.	x	Check hopper clearance from floor and adjust as needed.	
X Lubricate the pillow blocks supporting the dismechanism. STEERING X Lubricate steering cylinder rod ends. X Lubricate steering fork assembly.		Inspect the hopper flaps for wear or damage and replace as needed.	
STEERING X Lubricate steering cylinder rod ends. X Lubricate steering fork assembly.	X	Inspect hopper side and frame seals for wear or damage. Adjust or replace as needed.	
X Lubricate steering cylinder rod ends. X Lubricate steering fork assembly.	x x	Lubricate the pillow blocks supporting the dump mechanism.	
X Lubricate steering fork assembly.		STEERING	
VHISTORY AND	x	Lubricate steering cylinder rod ends.	
X Check for leaks.	x	Lubricate steering fork assembly.	
	x	Check for leaks.	
PARKING BRAKE		PARKING BRAKE	
X Check for proper functioning and adjust as needed.	X		

PowerBoss, Inc. Copyright 2008

PB # 4100034 | Rev. 01A08 | Armadillo* SW/10XV



PLANNED MAINTENANCE CHART (Continued)

FREQU	JENO	CY (II	OH	URS)	SERVICE
DAILY	50	100	200	500	(BY MAINTENANCE AREA)
					TIRES
X					Visually inspect for wear and damage. Repair or replace as needed
			х		Check pneumatic tires for proper air pressure (110 psi).
					MISCELLANEOUS
				X	Inspect latches and hinges. Tighten and lubricate as needed.
			х		Check anti-static drag chain on rear wall of broom chamber for damage or excessive wear. Replace as needed.
				X	Check side broom lift cable and lift cable for wear
					IMPELLER
X					Check for hydraulic fluid leaks.



SERVICE INSTRUCTIONS ENGINE

Maintenance requirements and service instructions for your sweeper engine are outlined in the following parts of this Maintenance Section:

- Air Intake System
- Electrical System
- Fuel System
- Coolant System
- Lubrication System

All basic maintenance tasks are listed with their recommended frequencies on the Planned Maintenance Chart in this manual. Important additional maintenance requirements and instructions are explained in the engine manual which comes with your machine.



Never attempt to perform any service on the equipment or components until the engine if OFF, the parking brake is LOCKED, and the wheels are CHOCKED.



SERVICE INSTRUCTIONS (CONTINUED) AIR INTAKE SYSTEM

AIR FILTER REMOVAL

- Turn off the engine and set the parking brake.
- Lift the engine cover.
- Locate the air filter and unclamp the retaining clamp.
- Remove the dust cup.
- Pull the rubber plug out of the dust cup and empty the contents.
- Pull the air filter out of its housing.

AIR FILTER CLEANING

- Once you have removed the air filter, empty the dust cup and clean the interior
 of the air filter housing.
- Use an air hose to blow out the air filter. Air pressure should be 100 psi or less.

AIR FILTER INSPECTION

After you clean the air filter, check it for holes by passing a light bulb inside it.

AIR FILTER INSTALLATION

- Wipe out the air cleaner housing with a damp cloth. Be sure all dirt is removed.
- Install the cleaned replacement filter so that the fins are at the far end of the housing. Be careful not to damage the fins.
- Replace the wing nut and tighten it.
- Replace the rubber plug in the dust cup.
- Replace dust cup, being sure embossed word "top" on cup is positioned correctly (up).
- Tighten the ring clamp.
- Check the condition of intake hoses and clamps. Close engine cover.



SERVICE INSTRUCTIONS (CONTINUED) ELECTRICAL SYSTEM

BATTERY CLEANING

- Combine baking soda and water in a strong solution.
- Brush the solution over the battery top, including terminals and cable clamps.
 Make sure the solution does not enter the battery.
- Using a wire brush, clean the terminal posts and cable clamps.
- Apply a thin coating of petroleum jelly to the terminals and cable clamps

BATTERY REPLACEMENT



Remove the negative battery cable before you remove the positive battery cable. This is done to prevent accidental electrical shorting which can result in personal injury.

- Disconnect the negative (-) cable and then the positive (+) cable.
- Remove the battery.
- Install the new battery.
- Connect the positive (+) battery cable first, then the negative (-) cable.

CIRCUIT BREAKERS

If a circuit breaker trips, it can be reset by pressing the reset button in the center of the breaker. (The circuit breakers are located on the instrument panel below the steering wheel.)

FUSES

Fuses are located in the fuse panel behind the hopper on the firewall upper right corner when facing the unit



Safety Arm Must Be Engaged When Checking These Fuses

PB # 4100034 / Rev. 01A08



SERVICE INSTRUCTIONS (CONTINUED) FUEL SYSTEM

AWARNING

- Never attempt to perform any service on the equipment or components until the engine is OFF, the parking brake is LOCKED, and the wheels are CHOCKED.
- Never operate an LPG powered sweeper when any component in the fuel system is malfunctioning or leaking.
- Never bypass safety components unless you are testing them.
- 4. Replace any defective safety components before operation the sweeper.
- During repair or servicing of the fuel system, work in a properly ventilated area and do not smoke or allow an open flame near the fuel system.
- When disconnecting the tank coupling, always wear gloves. LPG fuel can freeze bare hands.
- Under no circumstances should the fuel filter lock be bypassed, except when testing.
 After testing, always reconnect lock. Bypassing the fuel filter lock after testing creates a potential fire hazard.

Tier II compliant fuel system Refer to P.S.I Service Manual

PowerBoss, Inc. Copyright 2008



SERVICE INSTRUCTIONS (CONTINUED) COOLANT SYSTEM

BLOWING OUT RADIATOR FINS

NOTE

Make sure radiator is cool before blowing out the radiator fins with compressed air.

REVERSE FLOW FLUSHING

- At the engine, disconnect the hoses.
- Make sure the radiator cap is on tight.
- Using a hose clamp, clamp a flushing gun onto the lower hose.
- Turn on the water and fill the radiator.
- To keep from damaging the radiator, apply air pressure slowly and carefully.
- Shut off the air pressure, refill the radiator with water, and reapply the air pressure. You will need to repeat these steps until water flushed from the radiator runs out clear.
- Inspect and clean the radiator cap.
- Inspect and reconnect the hoses.
- Refill the radiator with coolant.

NOTE

Use a 50/50 mixture of water and an anti-freeze with an ethylene glycol base.



SERVICE INSTRUCTIONS (CONTINUED) LUBRICATION

Gasoline and LPG Engines: Use any SF or SG rated oil meeting API specifications and suited to seasonal temperatures.

Refer to the Engine Manufacturer's Operator Manual for these specifications.

CHANGING ENGINE OIL


- Place a drain pan under the lowest end of the engine.
- Remove the drain plug and allow the oil to drain into the pan.
- Remove the used oil filter and replace with a new one.
- Dispose of the oil and oil filter in an approved manner.
- Remove the engine oil cap, add oil in the amounts listed in the engine manual, then secure the cap.

PowerBoss, Inc. Copyright 2008



SERVICE INSTRUCTIONS (CONTINUED) LUBRICATION POINTS


Lubrication	Type of Lubrication	Frequency (In Hours)
Steering Cylinder (2 fittings)	Grease	500
Steering Fork Assembly	Grease	500
Pillow Block Supporting Dump Mechanism (2 fittings)	Lithium Grease	500
Hood Latches & Hinges	Oil	500

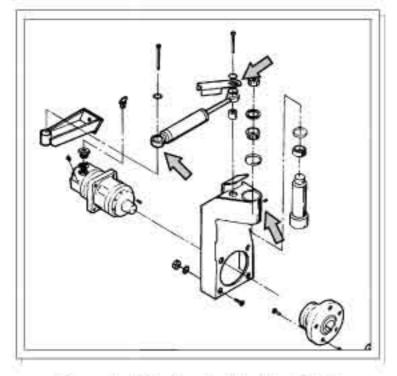

Powerflex Steering Lubrication Points



 Dump Arm Pillow Block Lubrication Points





SERVICE INSTRUCTIONS (CONTINUED) HYDRAULICS SYSTEM

FILLING THE FLUID RESERVOIR

NOTE

The reservoir is located inside the machine and is accessible by tilting the operator's seat forward.

 When the machine is cool and the hopper is in the lowered position, remove the dipstick. Fluid level should be between the high and low marks on the dipstick.



DO NOT OVERFILL! DO NOT USE TRANSMISSION FLUID

PowerBoss, Inc. recommends 15w-40w motor oil We Currently use EXXON XD-3

If the fluid level is not acceptable, add hydraulic fluid.

HYDRAULIC FLUID VISCOSITY SPECIFICATIONS

SUS @ 100° F 510-560 SUS @ 210° F 78-84

MAINTAINING HYDRAULIC OIL COOLER EFFICIENCY

Your machine is equipped with a hydraulic oil cooler, it is integrated with the radiator and utilizes exhausted radiator air from the engine fan to cool the hydraulic fluid. To maintain its efficiency, periodically blow out the radiator & oil cooler fins with compressed air. 100 p.s.i. is maximum

CHANGING THE HYDRAULIC FLUID

- Turn off the engine and engage the parking brake.
- Place a drain pan on the floor below the reservoir.
- Remove the drain plug located on the bottom rear of the reservoir and allow the fluid to drain.
- Discard the fluid in an approved manner, then replace and retighten the drain plug.
- Remove the filler / breather cap located on top of the reservoir and fill the reservoir with approved hydraulic fluid.

PowerBoss, Inc., Copyright 2008



SERVICE INSTRUCTIONS (CONTINUED) HYDRAULICS SYSTEM (CONTINUED)

NOTE

Ten (10) gallons (US) of fluid are required.

- Install the filler cap assembly.
- Check the drain plug for leakage.

CHANGING THE HYDRAULIC FLUID FILTER

- Turn off the engine and engage the parking brake.
- Unscrew the oil filter cartridge from the mount and discard in an approved manner.
- Apply a thin coating of fluid to the seal of a new filter element.
- Thread onto the mount and hand tighten.
- Tighten an additional one-half turn beyond hand tight

NOTE

Do not over tighten.

Start the machine, shut it off, then check for leakage.

ADJUSTING THE DIRECTIONAL CONTROL RETURN SPRING

You may encounter "creeping" problems from time to time. Creeping means the machine moves backward or forward when the forward/reverse pedal is in neutral. A grinding noise when the engine is shut down is a so an indicator that the directional control return spring needs adjusting. If this occurs, perform the procedure which follows:

- Turn off the engine, engage the parking brake and chock both wheels.
- Jack the rear of the machine so that the rear tire just clears the floor. Use two jack stands to support the machine.



PB # 4100034 | Rev. 01A08

DO NOT USE A JACK ALONE TO HOLD THE MACHINE!!!

PowerBoss, Inc. Copyright 2006



SERVICE INSTRUCTIONS (CONTINUED) HYDRAULICS SYSTEM (CONTINUED)

- Locate the forward / reverse adjustment bracket mounted beneath the pump on the pump mounting plate.
- Slightly loosen the bolt on the center of the bracket.
- Loosen the locking nut on each of the adjusting bolts on the side of the bracket closest to the pump mounting plate.
- From the operator's seat, start the engine and run at half throttle.
- Turn the adjusting bolts while watching the rear wheel. Continue to adjust until the rear wheel does not turn in either direction.
- Fully open the throttle. Push the directional control pedal forward and backward to be sure the pump stays in neutral. Check the wheel again and adjust as needed until the wheel remains motionless.
- Retighten all the locking nuts and bolts.
- Turn the engine off and lower the machine to the floor.



SERVICE INSTRUCTIONS (CONTINUED) SWEEP COMPONENTS

BROOM DOOR FLAP INSPECTION

NOTE Perform this inspection when the machine is parked on a level surface.

- Turn the machine off and lock the parking brake.
- Inspect broom door flaps for wear and damage. Flap clearance should be '%" (3.18 mm) above the floor.
- Worn and damaged flaps should be replaced immediately to maintain proper dust control.

BROOM DOOR FLAP REPLACEMENT AND ADJUSTMENT

The flaps are attached to the broom doors by a retainer bar, hex bolts and nuts. To remove the flaps, remove the nuts, bolts and retainer bar. To adjust the flaps, loosen the nuts and bolts, slide the flap up or down as needed. Retighten the nuts and bolts.

MAIN BROOM ADJUSTMENT

NOTE Perform this adjustment on a flat, smooth test surface.

- Drive the machine onto the test surface with the main broom in the RAISE position.
- Set the parking brake and position the main broom to the NORMAL position.
- Push the broom control switch to the ON position to activate the broom motor and open the throttle to full RPM.
- Allow about 45 seconds for the broom to operate, then deactivate the broom motor and raise the broom.

NOTE Test time will vary according to the test surface used.

Drive the machine clear of the test site.


Armadillo* SW/10XV



Examine the polished pattern made by the broom on the test area.

NOTE

A rectangular shape the length of the main broom, 2" (5.08 cm) wide, indicates the main broom is properly adjusted. A pattern smaller then 2" (5.08 cm) indicates need for lower adjustment. A pattern wider than 2" (5.08 cm) indicates a need for higher adjustment. If pattern is tapered from end to end instead of rectangular, see Taper Adjustment on the next page.

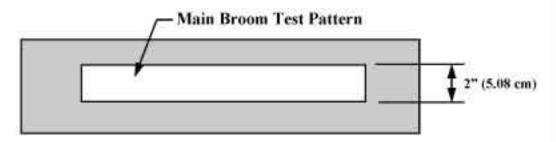

MAIN BROOM HEIGHT ADJUSTMENT

- Turn the machine off and lock the parking brake.
- Position the main broom lever in the LOWER position.

NOTE

The adjustment knob is located in the engine compartment on the broom control handle pivot.


- Turn the broom adjusting knob clockwise one-eighth turn to free the wingnut.
- Turn the wingnut counter-clockwise to allow space for adjustment.
- 5. Make a lower or higher adjustment with the knob as required.
- Retighten the wingnut.
- Repeat the main broom adjustment test to see that the broom is properly adjusted.



MAIN BROOM TAPER ADJUSTMENT

NOTE

It is not usually necessary to perform this adjustment. However, if the main broom adjustment test shows a pattern that is tapered in length (one end is wider than the other), perform the procedures which follow.

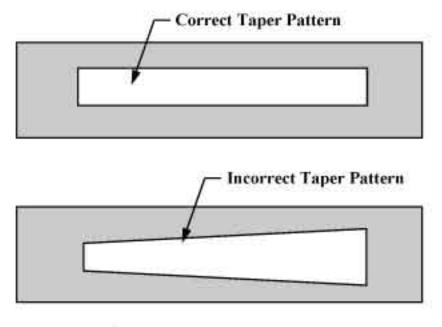

Main Broom Taper Patterns

- Locate the adjusting screws directly beneath the hydraulic pump.
- Loosen the jam juts on the adjusting screws, and loosen the retaining bolt on the inside of the mounting bracket.
- Use the adjusting screws to raise or lower the left end of the main broom. (The right end of the broom remains fixed. All adjustments affect the left end of the broom.)
- After adjustment, tighten the retainer bolt and adjusting screws.
- Repeat the main broom adjustment test to see that the broom is properly adjusted.



MAIN BROOM REPLACEMENT (Bristles worn to a length of 1 inch; 2.54 cm or less)

- Turn the engine off and lock the parking brake.
- Push the main broom control lever to the LOWER position
- Open the left broom chamber door (the door opposite the driver's seat).
- Using a ¾" wrench, remove the hex bolt on the main broom idler mount.
- Pull the main broom idler mount straight out to remove.
- Grasp the main broom by the plastic drive hub, pull the main broom straight out and clear of the broom chamber.
- Depending on broom condition, you can either rotate the old broom end-to-end
 and re-install it or you can install a new broom. Slide the main broom into the
 broom chamber and align the broom with the metal drive hub located at the far
 side of the broom chamber.
 - If a worn broom is being replaced, install the new broom by first adjusting the broom arms up, to better match the position of the drive hub with the hub on the new broom.
- Once the broom is started onto the drive hubs, rotate the broom counter-clockwise while pushing lightly against the broom.
- Once the broom is fully engaged, replace the idler hub while aligning the seats in the idler hub with the broom's drive hub ears.
- Install the retaining bolt into position and tighten with the wrench.
- Close and latch the left broom door.
- Perform a main broom adjustment test and adjust as needed.



SIDE BROOM ANGLE ADJUSTMENT

The angle adjustment is controlled with a stop bolt. This stop bolt is located at the top front of the side broom arm (under the spring). To increase the angle of the side broom, loosen the jam nut and turn the stop bolt counter-clockwise. Be sure to retighten the jam nut back down once the adjustment is made.

SIDE BROOM HEIGHT (WEAR) ADJUSTMENT

The height of the side broom is adjusted with the use of a stop bolt located at the lower rear of the curb broom arm. As the side broom wears, it will be necessary to lower the arm. To lower the side broom, loosen the jam nut on the stop bolt. Turn the stop bolt in a counter-clockwise direction, check the side broom for proper contact and re-tighten the jam nut.

SIDE BROOM LIFT CABLE ADJUSTMENT

This adjustment is made at the cable clevis attached to the side broom assembly. It controls the height of the side broom in the **RAISED** position. This adjustment must be made with the hopper fully lowered.

- Pull the side broom lever into the RAISED position.
- Loosen the locknut on the threaded rod at the clevis.
- Turn the threaded rod in or out to set the side broom in the maximum raised position.
- Secure the cable adjustment by tightening the locknut.



SIDE BROOM REPLACEMENT (Bristles worn to a length of 3 inches; 7.62 cm or less)

NOTE

The side broom features a quick release mechanism which enables the operator to remove the brush in seconds.

- Raise the side broom and lock in the RAISE position.
- Turn the side broom by hand until the brush retainer bar is accessible.
- Lift the bar and turn the broom clockwise (about one eighth of a turn) until the lock pins in the broom disengage from the drive plate.
- Install the new broom by positioning the three drive pins into the pilot holes of the drive plate.
- Lift and rotate the broom until the broom retainer bar springs into the locked position.
- Check to make sure all thee drive pins are properly engaged.



SERVICE INSTRUCTIONS (CONTINUED) HOPPER

NOTE

It is not usually necessary to remove the hopper on high dump models. However, if it becomes necessary for maintenance or to install an option, use the following procedure to remove:

HIGH DUMP HOPPER REMOVAL

- Park the machine on a level surface and engage the parking brake.
- Raise the hopper and position the high dump hopper dolly, a platform truck or similar four wheeled cart under the hopper.
- Set the hopper down on the truck and turn the engine off.
- Cycle the rotation control handle (#2) in both positions to relieve any residual hydraulic pressure.
- Remove three bolts, washers, nuts and backing plate.
- Disconnect the wire connections at the right side of the hopper.
- While spreading the dump arms slightly, roll the hopper away from the machine.

HIGH DUMP HOPPER REPLACEMENT

- Position the hopper on the dolly so as to align the mounting holes in the sides of the hopper with the rotation mounts on the arms. Lift arms should be positioned about 1/3 of the way up.
- Engage the lift arm rotation plates with the mounting bolts on each side of the hopper.
- Start the machine and lift the hopper.
- Drive away from the hopper dolly or cart.
- Lower the hopper.
- Engage the wire connections at the right side of the hopper.

PB # 4100034 | Rev. 01A08

Page 44



FILTER REMOVAL

- Release the latch on the hopper cover and raise the cover.
- Disconnect the wire harness leading to the filter shaker motor.
- Unscrew the two screws (each attached using one conical washer and an isolator) securing the filter retainer bars to the hopper.
- Remove the shaker motor assembly and filter retainer bars.
- Lift out the panel filter.

FILTER CLEANING

The dust control filter is a polyester type element filter. It may be vacuumed, blown out with compressed air, tapped against the floor or washed with soap and water.

- If blown out with compressed air, use 100 psi or less.
- If washed with soap and water, use 40 psi water pressure or less.



Make sure the filters are thoroughly dried while standing on their side before installing in the hopper. Do not install or use a wet filter.

FILTER REPLACEMENT

PH # 4100034 / Rev. 01A08

- Insert the panel filter.
- Install the shaker motor assembly.
- Install and tighten the four filter retaining screws and isolators.
- Hook the wire harness to the filter shaker motors.
- Close the hopper cover and secure the latch.



FLOOR CLEARANCE AND DUMP ADJUSTMENTS


In order to perform properly, the hopper must maintain a distance of $3\frac{1}{2}$ " (8.89 cm) from the floor to the rear hopper entrance lip. The front of the hopper should be adjusted so that the front bumper aligns with the hopper frame where the two meet. When properly adjusted, the front edge of the hopper will be 5" (12.7 cm) to 6" (15.24 cm) from the floor.

ADJUSTING MAXIMUM HOPPER DUMP ANGLE

 Park the machine on a level surface, shut off the engine and engage the parking brake.



Do not rely upon the hydraulic cylinders to keep the hopper raised for maintenance. Always engage the safety arm before servicing the hopper.

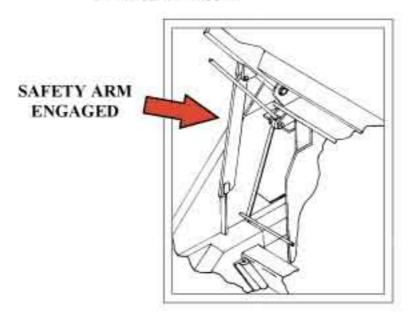

Adjust the lift arm stop bolts located on top of the wheel wells as low as possible
while still allowing the side broom assembly to clear the lift arms when the hopper
is in the NORMAL position. Be sure that both lift arms contact the stop bolts at
the same time.

NOTE

PB # 4100034 Rev. 01A08

This may involve raising and lowering the hopper several times.

 After adjustment, with the hopper down, use the two adjustable stops located on the rotation plates on both sides of the hopper to establish 3½" (8.89 cm) clearance between the rear hopper entrance lip and the floor.



NOTE

The stop on the driver's side is located immediately below the cylinder rod end and is threaded into the cylinder mount arm. The stop on the left side is located directly above the arm rotation plate.

- 4. After the 3½" (8.89 cm) clearance is established, make sure both stops make contact simultaneously. The lower front edge of the hopper should be 5" (12.7 cm) to 6" (15.24 cm) from the floor. A balanced adjustment of both sets of adjustment bolts is required to correctly adjust the hopper in the lower position. If the bumper is lower than the frame, after the hopper is correctly adjusted, loosen the bumper attachment bolts and reposition the front bumper.
- Raise the hopper and rotate fully.
- Turn the engine off.

AWARNING

Do not rely upon the hydraulic cylinders to keep the hopper raised for maintenance. Always engage the safety arm before servicing the hopper.

- Adjust the stops on the hopper mounts on each side of the hopper so that clearance between the lift arms and the cut-outs in the bumper is ¼" (6.35 mm) maximum.
- 8. Loosen the locking set screw in the bottom side of the rotation cylinder rod end.
- Using the hole in the cylinder rod, turn the rod to adjust the cylinder extended length to match the hopper rotation stops.
- Tighten the set screw.
- Rotate the hopper back, remove the safety arm and lower the hopper.

VACUUM GASKET MOUNT ADJUSTMENT

 With the hopper in the normal position, observe contact between the back of the hopper and gasket. If complete seal is not maintained, raise the high dump hopper.



Do not rely upon the hydraulic cylinders to keep the hopper raised for maintenance. Always engage the safety arm before servicing the hopper.



Loosen the mounting bolts in the gasket mount. Move the assembly toward the hopper. Tighten the bolts. Test and repeat if necessary.

FLAP REPLACEMENT

Flaps located at the entrance lip and on the sides of the hopper must be replaced when worn or damaged. The flap panels may be replaced separately.

- Park the machine on a level surface and engage the parking brake.
- Raise the hopper



Do not rely upon the hydraulic cylinder to keep the hopper raised for maintenance. Always engage the safety arm before servicing the hopper.

- Turn off the engine
- Remove the flap retaining angle and worn or damaged flaps
- Install the new flaps.
- Replace the retaining angle.

FRAME SEAL REPLACEMENT

FRONT FRAME SEAL

The hopper frame seal bolts to the front edge of the engine pan. Install a new seal by folding it in half to align the holes. Doubled edge with holes goes on the bottom. Support the seal straight up while bolting the retainer bar in place. The seal should fall over the retainer bar after installation. Be certain that the seal edges are aligned to prevent twisting of the seal.

SIDE FRAME SEAL

The side frame seals should clear the floor by at least ½" (3.18 cm). If the bottom of a side seal measures ½" (1.27 cm) or more above the floor, readjust it or replace it by removing the bolts on the inside of the wheel wells, installing a new seal, and securing it with the bolts. The double edge with the holes goes toward the front.



SERVICE INSTRUCTIONS (CONTINUED) PARKING BRAKE

Normal adjustment of the parking brake can be accomplished from the operator compartment. Locate the knurled handle on the parking brake lever. Turn the handle clockwise to increase brake tension.

NOTE

Two or three turns is usually adequate. DO NOT OVERTIGHTEN.

If this adjustment becomes ineffective, it will be necessary to adjust the cable length.



Do not rely upon the hydraulic cylinders to keep the hopper raised for maintenance. Always engage the safety arm before servicing in the area of the hopper.

ADJUSTING THE PARKING BRAKE CABLE LENGTH

- Park the machine on a level surface and chock the wheels.
- Place the parking brake lever in the "OFF" position.
- Turn the knurled handle counter-clockwise as far as possible.
- Raise the hopper and engage the safety arm.
- Locate the cable clevis ends for the parking brake cables.
- Disconnect the clevis ends from the bar.
- Loosen the jam nuts at the base of the clevis.
- Turn the clevis clockwise three or four complete turns.
- Tighten the jam nuts and re-install the clevis ends onto the bar.
- Adjust the knurled handle on the parking brake lever.



SERVICE INSTRUCTIONS (CONTINUED) TIRES

CHANGING SOLID TIRES

NOTE The procedures which follow apply to SOLID TIRES ONLY.

- Remove the tire from the vehicle by removing the five inner lug nuts.
- Remove the ten hex head bolts and nuts.
- Press the tire from the rim.
- Press the large rim half into the new tire.
- Mount the small rim half and secure with hex head bolts.
- Reinstall the tire on the machine

CHANGING PNEUMATIC TIRES



Changing pneumatic tires must be performed in a safety cage and require special tools, PowerBoss, Inc. recommends that you have these tires changed by a professional tire dealer. (They are to be inflated to 110 psi.)



SERVICE INSTRUCTIONS (CONTINUED) MISCELLANEOUS

MISCELLANEOUS ADJUSTMENTS

ANTI-STATIC CHAIN ADJUSTMENT

Each machine is equipped with an anti-static chain bolted to the back wall of the broom chamber. This should remain in contact with the floor at all times. Inspect the chain every 200 operating hours. Replace if at least one link does not drag the surface of the floor.

LATCHED AND HINGE MAINTENANCE

Latches and hinges should be inspected after every 500 hours of use. Retighten and oil if necessary.

CABLES

Inspect all cables for wear every 500 hours.



TROUBLESHOOTING


PROBLEM	CAUSE	SOLUTION
Engine will not start or runs roughly after start	Battery dead,	Recharge or replace battery.
	Machine out of fuel.	Refuel
	Fuel filter plugged.	Clean or replace filter.
	Fuel line broken or obstructed.	Blow fuel line out with compressed air
	Dirty air filter.	Clean or replace air filter.
	Problems with spark plugs,	Review engine manual at
	ignition points, ignition coil	back of this manual for
	ignition switch, carburetor,	maintenance and
	regulator, wiring harness.	troubleshooting procedures.
NOTE: On machines with LPG fuel, also check the	Tank valve not fully opened.	Open the valve slowly.
following:	Fuel tank type does not match	Use the correct tank type for
	fuel supply.	the fuel supply.
	Fuel tank and lines are	Open shut-off valve slowly
	covered with frost.	to ¼ open, start.
	Defective vacuum lock-off.	Replace or repair.



PROBLEM	CAUSE	SOLUTION
Engine overheats.	Low coolant level.	Supply coolant.
	Clogged radiator	Flush radiator
	Loose fan belt.	Tighten belt.
	Defective thermostat.	Replace thermostat.
	If coolant loss has not occurred, cl of the temperature sending unit	neck for malfunction
PowerBoss® moves slowly or does not move.	Parking brake is on.	Release brake.
	Directional control pedal	Clear jam or adjust linkage
	jammed, damaged, or not adjusted properly	
	Tires skidding from contact	Clean tires or drive through
	with oil or grease.	a solvent absorbing substance.
	Wheels jammed.	Clear jam.
	Low hydraulic fluid level.	Add hydraulic fluid.



PROBLEM	CAUSE	SOLUTION
PowerBoss® moves slowly or does not move (continued).	Hydraulic fluid temperature too high and too thin caused by excusive load, climbing, high environment temperatures, worn pump, or improper fluid.	Use the proper weight oil for the operation conditions check pump.
	Damaged or worn pump drive coupling	Replace damaged item.
	Other problems with the hydraulics system: pump failure, motor failure, relief valve leaking or stuck open.	See Hydraulics System Problems in this section.
PowerBoss® creeps in neutral.	Directional control pedal return spring is out of adjustment.	Perform the adjustment procedures.
Brushes do not turn or turn very slowly.	Hydraulic system problem: ⇒ motor ⇒ control valve ⇒ gear pump ⇒ relief valve	See Hydraulics System Problems in this section.

 



PROBLEM	CAUSE	SOLUTION	
Little or no vacuum in brush compartment.	Filters clogged.	Clean filters.	
	Leak or clog in hose from	Repair leaks; clear	
	impeller.	obstructions or replace hose.	
	Impeller failure.	Check and repair.	
Loss of dust control.	Debris in hose or impeller inlet	Clean.	
	Broom skirts or seal worn	Replace.	
	Skirt clearance from floor exceeds 1/4".	Adjust clearance.	
	Dust control filters clogged.	Clean filters.	
	Filter seals worn or missing.	Replace.	
	Poor seal with vacuum	Visually check and adjust, if	
	gasket.	necessary	
Sweeper unit leaving debris.	Hopper full.	Dump hopper.	
	Broom(s) out of adjustment	Adjust	



PROBLEM	CAUSE	SOLUTION
Sweeper unit leaving debris (continued)	Broom bristles worn.	Check broom for wear and adjustment
	Poor performance of broom drive mechanism.	Check for jam in broom chamber.
	Broom lift arms hung up with debris.	Clear out debris
	Hopper flaps damaged or missing.	Replace or adjust clearance.
	Hopper out of adjustment.	Check hopper clearance.
	Dust control filters clogged.	Clean filters.
Hopper does not raise or lower.	Hydraulics system problem: control valve gear pump lift cylinder relief valve	See Hydraulics Systems Problems in this section.
	Hopper arms binding	Lubricate or adjust arm linkage.



PROBLEM	CAUSE	SOLUTION
Hopper does not rotate or rotates too slowly.	Hopper load too heavy.	Dump more frequently.
	Hydraulics system problem:	See Hydraulics System
	⇒ control valve	Problems in this section.
	⇒ gear pump	
	⇒ lift cylinder	
	⇒ relief valve	
Hopper lift cylinder failure	Line to cylinder leaking.	Tighten fittings or replace
The state of the s		hose.
	Piston seals leaking.	Replace seals.
	Bent piston rod	Replace rod
Hydraulic control valve	Misaligned control linkage	Align
failure	**************************************	6
	Foreign matter in spool bore.	Remove spool and clean bore.
	Valve seals Leaking.	Replace seals.
	O-rings leaking	Replace o-rings
	Relief valve stuck open.	Clean or replace relief valve.



PROBLEM	CAUSE	SOLUTION
Hydraulic motor failure.	Motor leaking	Replace seals.
	Drive link malfunction.	Replace drive link.
	Output shaft malfunction.	Replace output shaft and bearings.
Hydraulic gear pump failure.	Pump leaking.	Replace seals or RR Pump
	Gears worn or scored.	Rebuild pump or RR Pump
	Relief valve stuck	Clean or replace (at control valve).
	Oil supply low.	Check and fill.
	Oil strainer clogged.	Replace strainer (inside reservoir).
	Incorrect oil.	Use recommended viscosity oil
	Damage due to entry of air into	Maintain correct hydraulic fluid
	hydraulic system.	level in reservoir. Keep suction hose fittings tight



PROBLEM	CAUSE	SOLUTION
Hydraulic variable displacement pump failure.	Pump leaking	Replace seals.
	Relief valve(s) stuck.	Clean or replace relief valve(s) at the pump
	Drive coupling malfunction.	Replace defective gears.
	Control linkage out of adjust	Check to see if linkage is
	ment.	binding unfastened
	Charge pump gears worn or scored.	Replace defective gears.
	Damage due to entry of air into	Maintain correct hydraulic flui
	hydraulic system.	level in reservoir. Keep
		suction hose fittings tight.



PROBLEM	CAUSE	SOLUTION
Hydraulic system noisy.	Air in system.	Check fluid level in reservoir, check for loose connections or leaks.
	Relief valve dirty or damaged.	Clean or replace
	Loose suction line.	Tighten fittings.
	Clogged section filter or pump inlet line.	Replace filter, clear line; change fluid in reservoir if dirty and flush system.
	Internal pump or motor damage.	Inspect and repair.



Thank you.

Operation, Maintenance and Troubleshooting

Your Page

Thank you for your purchase of the now industry standard for sweepers. PowerBoss takes great pride in offering the most dependable, reliable and value in industrial / commercial power sweepers and sweeper / scrubbers. We set the standard.

Our Publishing Department would like to hear from you. If you see any errors, omissions or something that just needs clarification in this manual please let us know. We are working hard toward perfection in our corner of the process to bring you the best you can buy. Please fill out the form below and comment on how you found our manual.

*Name_____
*Title:

*Company Name:

*Address:

*Country:

Type of equipment or model number:

Comments:

*Information is optional. Please return to:

> Manager, Publishing Department, International PowerBoss, Inc. 175 Anderson Street Aberdeen, North Carolina 28315 USA


Phone (800) 982-7141 Toll Free



Operation, Maintenance and Troubleshooting


Notes:

Electrical Scematic Kubota V2203

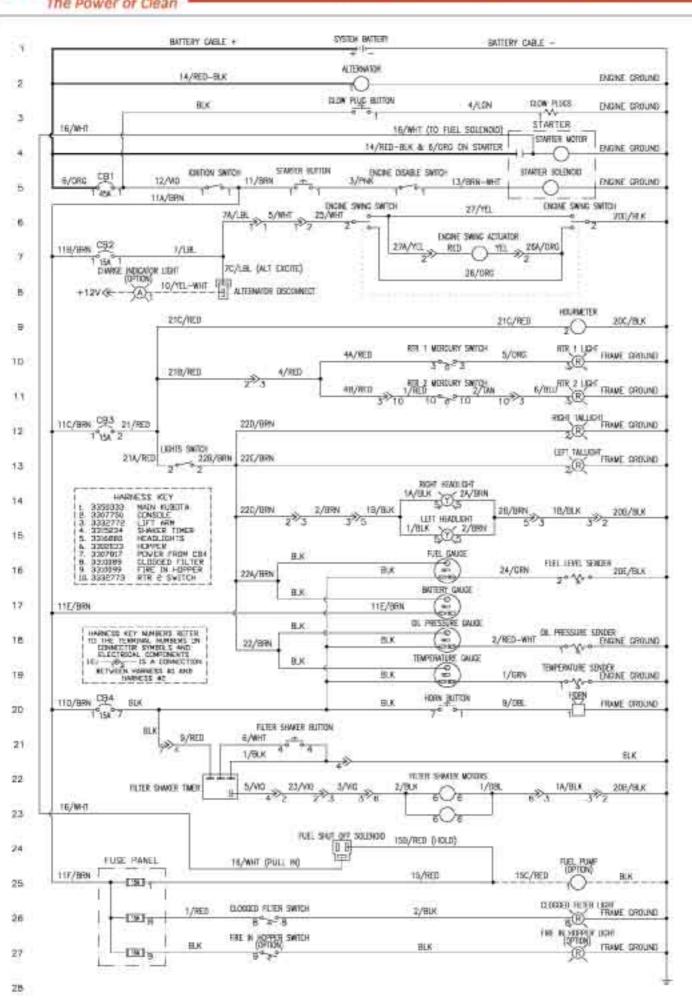



Electrical Scematic GM 1.6L

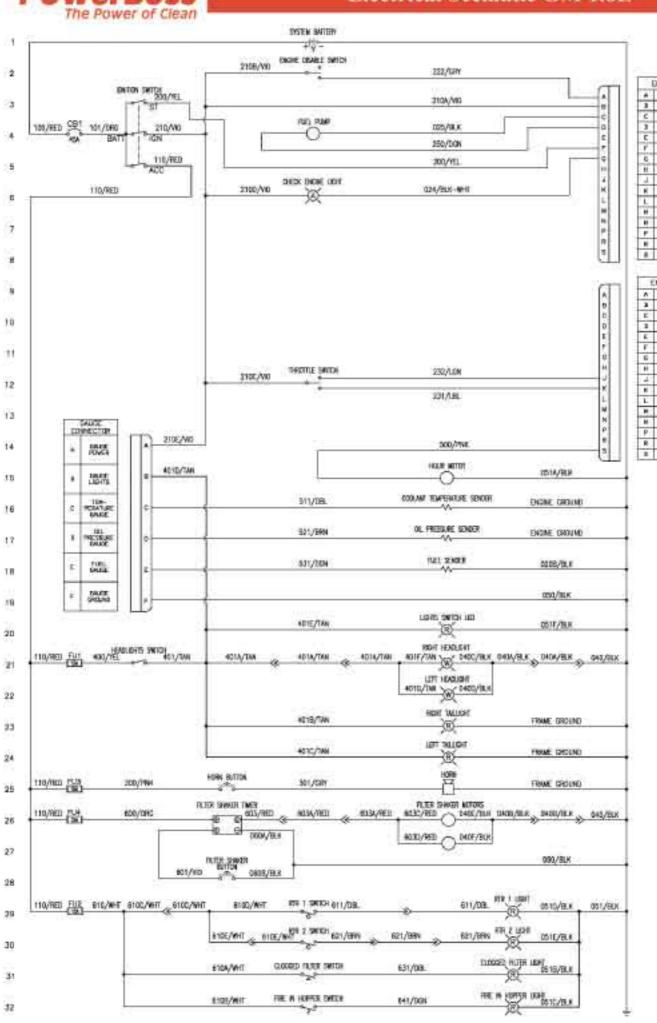

	ENGINE CONNECTOR 1
ė.	VEV
3	ALT EXCETE
c.	FUEL PURP -
1	FIREL PURP +
E	AIR TWY II
r	START COMMES
6	HEL OWLFUNCTIONS
H	FUEL BOLDER GARN DEED OF
Ţ.	PEROXYS
ĸ.	EVEN.
ı.	. BV KIN
#	SV CXT 1
H	E44 L +
۲	DAM 1
	TAX ALDIE E
8	BY EST & WIPP DIED


10	HUNE CONNECTOR 2
6	WURCE
2	MAX PWM 5 RECORD
E	ALK PAR 5
2	YALIA
E	SKILINE
F	AUX PVN I
6	ALK HAR PLD
H	AUE AND PUR
41	SEV BOLDET &
ю.	GDV BOUGT 1
L	A11 005 #
ю:	ALL DES IS
10	A2 +
P:	V\$ -
R	ALK AM PIR
2	MAY REWILD VEHICLE



PowerBoss, Inc. Copyright 2008

Page 65



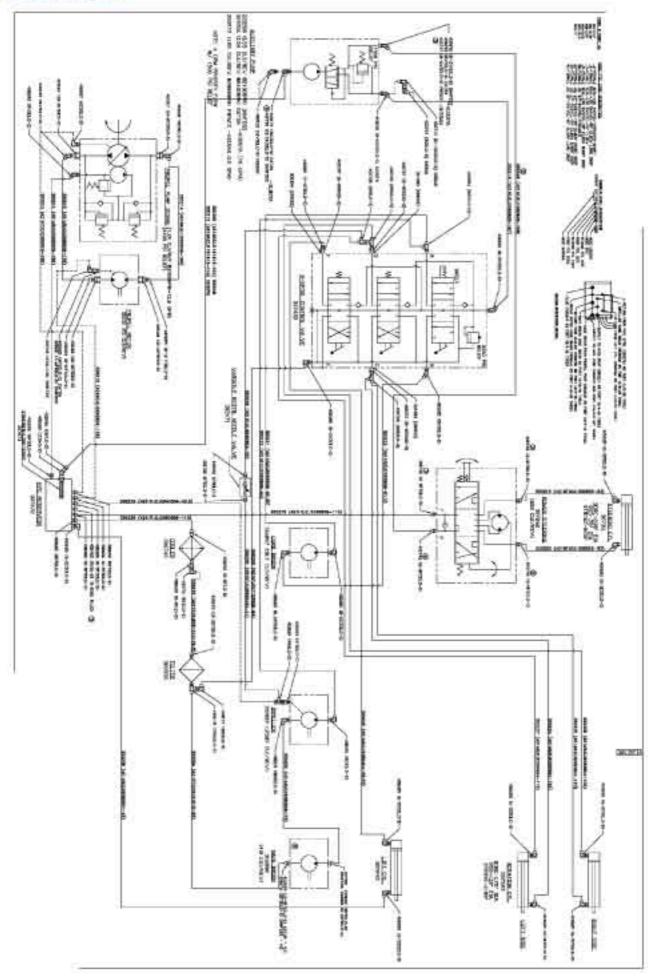



Warranty Matrix

	Travel*	Labor	Parts	Engine
Walk Behinds				
Battery sweepers	Ninety days	One year	One year	N/A
IC sweepers	Ninety days	One year	One year	Through manufacturer
Battery scrubbers	Ninety days	Two years	Three years	N/A
Riders				
Battery scrubbers	Ninety days	Two years	Three years/2000 hrs	N/A
IC sweeper/ scrubbers	Ninety days	Six months	Two years/2000 hrs	Two years/3000 hrs
IC sweepers	Ninety days	Six months	Four years/3000 hrs	Five years/3000 hrs
Exceptions				
Apex series sweepers	Ninety days	One year	One year/1000 hrs	One year/1000 hrs
6X sweeper	Ninety days	Six months	Two years/2000 hrs	Two years/2000 hours

Tank Bladders Polypropylene Plastic Tanks Batteries

Chargers Replacement Parts Travel Time Eight years/ no additional labor Ten years/ no additional labor 0-3 months full replacement 4-12 prorated credit One-year replacement Ninety days *Two-hour cap

Extended Warranties Available

All above labor and travel reimbursed at 65% of the published shop rate.



"The Power of Clean"

PowerBoss Is A Full Line Manufacturer Of Sweepers and Scrubbers For Industrial Facilities.

PowerBoss, Inc. 175 Anderson Street P.O. Box 1227- Aberdeen North Carolina 28315

Phone: 800-982-7141 - Fax: 1-800-277-7141 Local: 910-944-2105 Fax: 910-944-7409 e-mail:techsupport@powerboss.com